

# ***ALERT***



## ***Installation Manual***

***Model  
450R***



## WARRANTY

### **Alert Warranty Information**

Product warranty returns must only be submitted by an authorized dealer.

All Alert models have a Limited Lifetime Warranty on the main control module.

All parts excluding the control module have a two year warranty against defects in workmanship. This includes the shock sensors, remote transmitters and sirens. The control module will be repaired or replaced at our discretion for up to a 24 month period at no charge. After 24 months a \$30.00 fee will be charged for repair or replacement of the control module.

Removal and reinstallation charges are not the responsibility of JBS Technologies, LLC the manufacturer of Alert. Warranty registration must be completed within 14 days of the original date of purchase. Registration can be mailed in or performed on line at [www.alertautomotive.com](http://www.alertautomotive.com). JBS Technologies makes no warranty against the theft of a vehicle or its contents. This warranty only extends to the original system purchaser and the vehicle it was originally installed on.

### **Limitation of Remedies**

The purchasers remedy is limited to the repair or replacement of the unit and in no event shall exceed the purchase price. Incidental, consequential and or indirect damages are expressly disclaimed. No person or entity is authorized to alter or amend this limited lifetime warranty.

**INSTALATION DIAGRAM** .....8

**H1: 6 PIN HEAVY GAUGE WIRING HARNESS** .....9

    H1/1 VIOLET Wire – Starter Output. ....9

    H1/2 & H1/3 RED Wires – (+) 12V Power Input .....9

    H1/4 YELLOW Wire- Ignition 1 Output .....9

    H1/5 PINK Wire – Ignition 2 Output .....9

    H1/6 BROWN – Accessory Output (Heater/ACC Output) .....10

**H2: 5 PIN WIRE HARNESS**.....10

    H2/1 RED/WHITRE Wire – Parking Light Relay Input.....10

    H2/2 WHITE Wire – Parking Light Relay Output.....10

    H2/3 BLACK Wire – System Ground .....10

    H2/4 BROWN Wire – Horn Output/ Factory Rearm Output .....10

    H2/5 RED Wire – System (+)12Volt Constant Power Input .....11

**H3: 2 PIN WHITE CONNECTOR FOR LED** .....11

**H4: 5 PIN WHITE HARNESS**.....11

    H4/1 BLUE/BLACK Wire – Ignition 3 Output.....11

    H4/2 BLACK/WHITE Wire –  
         Dome Light Supervision/Starter Crank Output .....12

    H4/3 LT. GREEN/BLACK Wire –  
         2 Step Unlock/Factory Disarm Output .....12

    H4/4 RED/WHITE Wire – Trunk/Channel 3 Output .....13

    H4/5 ORANGE Wire – Starter Disable Output .....13

**H5: 6 PIN BLACK HARNESS** .....14

    H5/1 BLACK/WHITE Wire –  
         Instant Start and Stop/Negative Door Input .....14

    H5/2 VIOLET Wire – (+) Positive Door Pin Input .....14

    H5/3 GREY Wire –  
         Negative Safety Shut Down/Hood Pin Switch Input.....14

    H5/4 BROWN/RED Wire – Positive Safety Shut Down/Brake Input ...15

    H5/5 THIN BLACK Wire – Remote Start Enable/Neutral Safety Input 16

    H5/6 VIOLET/WHITE Wire – Tach Input/Oil Sensor Input.....16

    H6: 2-PIN BLUE CONNECTOR FOR PROGRAM/VALET SWITCH .....17

    H7: 3-PIN DOOR LOCK CONNECTOR.....17-19

    H8: 3-PIN BLACK CONNECTOR FOR WINDSHIELD ANTENNA .....19

<b>PROGRAMMING AND TESTING</b> .....	20
<b>PROGRAMMING A NEW TRANSMITTER</b> .....	20
Alarm Feature #1 Programming.....	20
Alarm Feature Programming Chart #1 .....	21
Alarm Feature #2 Programming.....	21
Alarm Feature Programming Chart #2 .....	22
Start Feature #1 Programming .....	23
Start Feature Chart #1 .....	23-24
Child Safety Mode.....	24
Start Feature #2 Programming .....	24-25
Start Feature Programming Chart #2 .....	25
Engine Checking Tach/RPM Learning.....	25-28
Return to Factory Default Setting .....	28-29
Shutdown Diagnostics .....	29-30
Testing Your Installation .....	30
Neutral Start Safety Test.....	30-31
Mechanical Neutral Safety Switch Considerations .....	31
Park/Neutral ECM Input .....	31-32
Key In Sensor Circuit .....	32
Method 1 .....	32-33
Method 2 .....	33-34

## IMPORTANT NOTICE


This remote starter with keyless entry system is designed to be installed on fuel injected vehicles only.

- This system must be installed and wired through a safety switch to assure that it will not start in any forward or reverse gear.
- Some automatic transmission vehicles [mainly older GM models with a purple starter wire] have a mechanical-type park mechanism instead of an electrical safety switch. The mechanical type does not interrupt the starter circuit when the transmission is any gear and does not offer the 100% level of safety required for remote starting purposes. Therefore, you must create a circuit that will prevent the remote starter from engaging when the key is in the ignition.
- Once you install this system, you must verify that the vehicle will not start any forward or reverse gear.
- Read the operation manual for operating and programming routine.
- Do not install any component near the brake, gas pedal or steering linkage.
- Most vehicles have an SRS air bag system. Use extreme care and do not probe any wires of the SRS system. These wires will almost always be located inside a bright yellow tube located near the steering wheel column.
- Check behind panels before drilling any holes. Ensure that no wiring harness or other components are located behind the panels that would otherwise be damaged.
- Do not use conventional crimp lock or bullet connectors on any wiring.
- Do not disconnect the battery if the vehicle has an anti-theft radio or is equipped with an airbag. Doing so may cause a warning light to be displayed and the radio to stop functioning.
- Do not leave the interior or exterior lights on for an extended period of time. Remove the dome light fuse from the vehicles fuse box.
- Do not mount the control module until all connections have been made and the unit is programmed and tested.
- Finally place the warning sticker under the hood when the installation is completed.

## COMPONENTS

- 1- Main Control Module
- 2- Four Button Remote Transmitters
- 1- 6 Pin Ignition Harness
- 1- 5 Pin Harness
- 1- 8 Pin Mini Harness
- 1- 5 Pin Mini Output Harness
- 1- 5 Pin Mini Input Harness
- 1- 2 Pin Valet Switch
- 1- 2 Pin Led Light Harness
- 1- 3 Pin Antenna Harness
- 1- 3 Pin Door Lock Harness
- 1- Hood Switch
- 1- Hood and Window Decal
- 1- Installation Manual
- 1- Owners Manual

# INSTALLATION DIAGRAM

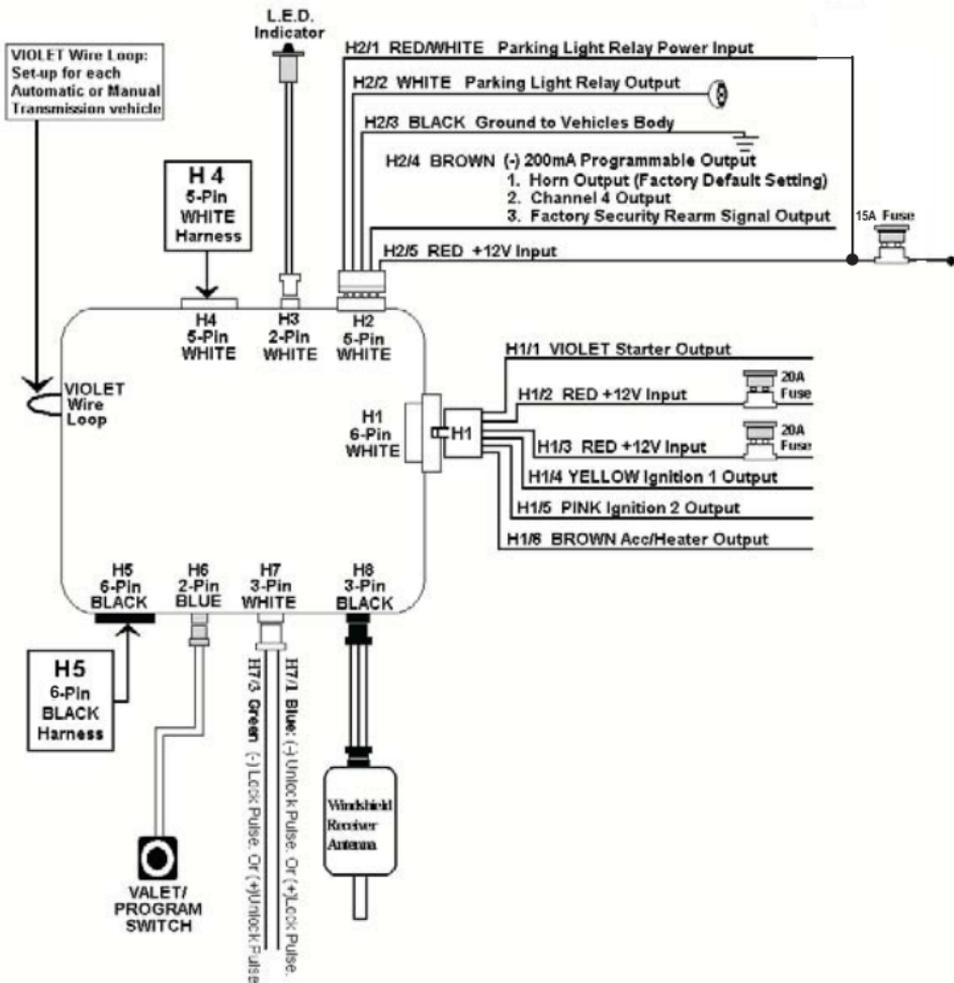

## WIRING HARNESSSES

### H4

- H4/1** **Blue/White** wire: (-) 200mA Programmable Output  
Dome Light Control Output (Factory Default Setting  
or Channel 4 Output  
Or Ground Output during Start (crank)
- H4/2** **Blue/White** wire: (-) 200mA Ignition 3 Control Output
- H4/3** **LT. Green / Black** Wire: (-) 200 mA Program mable output  
Dual Pulse Door Unlock Output (Factory Default setting)  
Or Factory Security Disarm Signal Output  
Or Start Status (Shock Sensor Bypass Control) Output
- H4/4** **Red / White** Wire: (-) 200 mA Channel 3 output (Trunk Realse)
- H4/5** **Orange** Wire: (-) 500mA Grounded Output When Armed

### H5

- H5/1** **White / Black** Wire: (-) Program mable Input  
(-) Instant Start & Turn Off Input (Uncut (leave intact) the Violet Wire Loop)  
(-) Negative Door Pin Input (Cut the Violet Wire Loop)
- H5/2** **Violet** Wire: (+) Positive Door Pin Input . (Cut The Violet Wire Loop)
- H5/3** **Grey** Wire: (-) Negative Safety Shut Down for Hood pin switch
- H5/4** **Brown / Red** Wire: (+) Positive Safety Shut Down Input for Brake.
- H5/5** **Thin Black** Wire: (-) Neutral Safety Switch Input &  
(-) Remote Start Toggle Switch Input
- H5/6** **Violet / White** Wire: Tach. Input or Oil Sensor Connection

**IMPORTANT NOTE:** Directly connect the **H5/5 Thin Black** wire to the "GROUND" when this wire is not used.

Keep all wiring away from moving engine parts, exhaust pipes and high-tension cable. Tape wires that pass through holes on the firewall to prevent fraying. Watch out for sharp edges that may damage wires and cause short circuits.


**CAUTION:** Do not connect the wire harness to the control module until all wiring to vehicle is complete.

## H1 6-PIN HEAVY GAUGE WIRING CONNECTIONS:

Remember that the system is designed to duplicate the same functions of the ignition key switch! Since this installation will require analysis of the ignition switch functions, we recommend making the H1 harness connections directly to the ignition switch wires.

### H1/1 VIOLET Wire—(Starter Crank Output)

Connect the **VIOLET** wire to the starter crank wire at the ignition switch harness. This wire shows **+12 volts** when the ignition switch is turned to the "**start**" or "**crank**" position only. This wire will test **0 volts** in all other ignition switch positions.

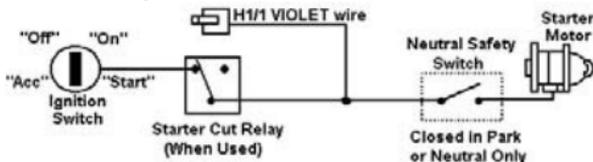

### H1/2 and H1/3 RED Wires (2)-(+12V Power Input)

Remove the (2) **two 20A fuses** prior to connecting these wires and do not replace them until the satellite harness has been plugged into the control module. These two wires are the source of current for all the circuits the relay satellite will energize. They must be connected to a high current source. Since the factory supplies (+) **12V** to the key switch, it is recommended you make your connections there.

**Note:** If the factory supplies two separate (+) **12V** feeds to the ignition switch, connect (1) **RED** wire of the satellite to each feed at the switch.

### H1/4 YELLOW Wire – (Ignition 1 Output)

Connect the **YELLOW** wire to the ignition 1 wire from the ignition switch. The ignition wire should receive "**12 volts**" when the ignition key is in the "**on**" and "**start**" or "**crank**" positions. When the ignition is turned "**off**", the ignition wire should receive "**0**" voltage. **The YELLOW wire must be connected.**

### H1/5 PINK Wire – (Ignition 2 Output)

Some vehicles have 2 ignition wires that must be connected. Attach the **PINK** wire to the ignition 2 wire from the ignition switch. The ignition wire should receive "**+12 volts**" when the ignition key is in the "**on**" or "**run**" and "**start**" or "**crank**" positions. When the ignition is turned to the "**off**" position this wire will show "**0**" voltage. If the **PINK** wire is not used, cap or tape the end of the wire.

## H1/6 BROWN Wire –Accessory Output (Heater /AC Output)

Connect the **BROWN** wire to the Accessory/Heater-Blower wire in the vehicle that powers the Heater/AC system. The Accessory/Heater-Blower wire will show **+ 12 volts** when the ignition switch is turned to the **"accessory"(some vehicle) "on"** and **"run"** positions, and will show **"0" volts** when the key is turned to the **"off"** and **"start"** or **"crank"** positions. On some vehicles, there will often be more than one Accessory/Heater-Blower wire in the ignition harness. The correct Accessory/Heater-Blower wire will power the vehicle's Heater/AC system. **Note:** Some vehicle may have separate wires for the blower motor and the air conditioning compressor such as Ford products. In such cases, it will be necessary to add a relay to power the second Accessory/Heater-Blower wire, if your vehicle does not have a Ignition 2 wire, use the **Ignition 2 Output (H1/5 PINK)** wire from the remote starter to power up the second Accessory/Heater-Blower wire.

## H2 5-PIN WIRE HARNESS:

### H2/1 RED / WHITE Wire (Parking Light Relay Input)

The **RED/WHITE wire** is the input for the parking light relay. This wire will determine the output polarity of the parking light relay.

If your vehicle requires **+12volts** to power the parking light circuit you will not need to connect this wire. This wire is already connected to the **+12 volt** constant red wire in the same harness.

If your vehicle's parking light circuit operates on a switched ground then cut the **RED/WHITE** wire from the **RED** wire and attach it directly to a ground source. **Note:** Make sure to tape the **RED** wire at the cut location.

### H2/2 WHITE Wire (Parking Light Relay Output)

Connect the **WHITE** wire to the wire that powers the parking light circuit on the vehicle. The **WHITE** parking light wire is rated at 10amps max and should not exceed this current. If your vehicles parking light system requires more than 10amps you must add a relay to power the parking light system

### H2/3 BLACK Wire (System Ground)

This is main ground connection of the control module. Make this connection to a solid section of the vehicles frame ground.

### H2/4 BROWN Wire (Horn Output) (Channel 4 Output) (Factory Default setting)

The **BROWN** wire will provide a **(-) negative** output for the vehicles horn or optional siren hookup. This wire is a transistorized low current 200mA output, and should only be connected to the low current ground output from the vehicle's horn switch. **(See alarm feature #1 programming chart.)**

## (The BROWN wire can be used as a Channel 4 Output)

Press the **⏏** and **⏏** buttons at the same time to remote control optional electrical devices. The optional device will remain on when the buttons are held down and turn off and soon as you release. **(See alarm feature #1 programming chart.)**

## (The BROWN wire can also be used to rearm a factory security system)

This wire is designed to rearm a factory installed security system. This wire will supply a **(-) negative** pulse whenever the remote start times out or is shut down using the remote transmitter.

**Note:** Factory default for the brown wire is the horn output. To program for factory rearm. **(See alarm feature #1 programming chart.)**

## H2/5 RED Wire (System +12volt Constant Power)

Connect the **RED** wire to a constant **+12 volt** source.

## H3 2-PIN WHITE CONNECTOR FOR THE LED STATUS INDICATOR:

The led indicator status should be mounted in a highly visible area such as top of the dashboard, on top of the shifter console or on dashboard face. Leave at least 6mm space behind the mounting location for LED housing. Once a suitable location is chosen, drill a 6mm hole. Run the LED wires through the hole then press the 2 pin LED housing into the place. Route the LED wires to the control module.


## H4 5-PIN WHITE CONNECTOR:

### H4/1 BLUE / BLACK Wire (Ignition 3 Output)

This wire provides a **200mA (-) negative** ground output that becomes active 4 seconds before the remote start unit initializes, and remains grounded while running.

### Ignition 3 output:

Some newer vehicles use a third ignition wire which is required to start and keep the vehicle's engine running. If this is the case, wire an IGN 3 relay (not supplied) as shown below: Do not connect any vehicle circuits together, they are isolated for a reason.

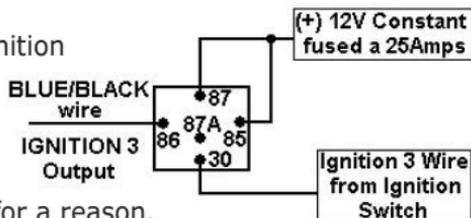

### H4/2 BLACK/WHITE Wire (Dome Light and Starter Crank Output)

#### **DOMELIGHT SUPERVISION OUTPUT (Factory Default Setting) –**

This wire provides a (-) **negative** ground output when you disarm or unlock with the remote transmitter. The current capacity of this wire is 200mA. This wire can control the operation of the interior lights. An optional 10 Amps relay must be used when not hooking to the BCM or low current input.

- Upon disarming, the interior lights will remain on for 30 seconds.
- If the vehicle is violated, the interior light will flash for the same duration as the horn. **(See alarm feature #1 programming chart.)**

#### **CHANNEL 4 OUTPUT–**

Press the  and  buttons at the same time to control optional electrical devices. The optional device will remain on when the buttons are held down and turn off and soon as you release **(See alarm feature #1 programming chart).**

#### **GROUND OUTPUT DURING START CRANK –**

This wire will provide a 200mA (-) **negative** ground output at the same time the **H1 VIOLET** starter crank wire is active. This output can be used to activate the bulb check wire found on GM vehicles with the passlock 1 anti-theft system. This wire is also referred to as the ECM wake up wire in some vehicles. Some Nissan and Chrysler vehicles require a second starter crank for remote starting. You must use a relay when using the **BLACK/WHITE** as a second start crank wire. **(See alarm feature #1 programming chart.)**

### H4/3 LT. GREEN / BLACK Wire (Step 2 Unlock and Factory Disarm Output)

#### **DUAL PULSE DOOR UNLOCK OUTPUT**

The dual pulse door unlock feature will work for the most fully electronic door lock circuits. The vehicle must have an electronic door lock switch which locks and unlocks all of vehicle's doors. When wired for this feature, press the disarm (or unlock) button one time will disarm the alarm and unlock the driver's door only. If you press the disarm (or unlock) button two times within 3 seconds, the alarm will disarm and all doors will unlock. This wire provides 200mA of (-) **negative** output for this feature. **(See alarm feature #1 programming chart.)**

## FACTORY SECURITY DISARM SIGNAL OUTPUT – (Factory Default Setting)

This wire is designed to disarm a factory installed security system. This wire will provide a **(-) negative** 1 second pulse upon a remote start and remote door unlocking. Some factory alarm systems must be disarmed first to allow remote starting. In most cases, this wire may be connected directly to the factory alarm disarm wire. The correct wire will show negative ground when the key is used to unlock the doors or trunk. This wire is usually found in the kick panel area in the wiring harness coming into the car body from the drivers door. **(See alarm feature #1 programming chart.)**

## START STATUS (Shock Sensor Bypass Control) OUTPUT–


This wire is designed to by-pass a shock sensor module. This wire will provide an **(-) negative** output whenever the remote start is operating plus an additional 3 seconds after the remote start unit is turned off. **(See alarm feature #1 programming chart.)**

## H4/4 RED / WHITE Wire( Trunk / Chanel 3 Output)

This wire will provide a 1 second 200mA **(-) negative** ground pulse by activating channel 2 on transmitter for two seconds This feature allows you to open the trunk release or other electric devices by the remote transmitter

## H4/5 ORANGE Wire (Starter Disable Output)

This wire will provide a 500mA **(-) negative** ground output when the alarm is armed. This output can control starter disable relay as shown in the diagram below.

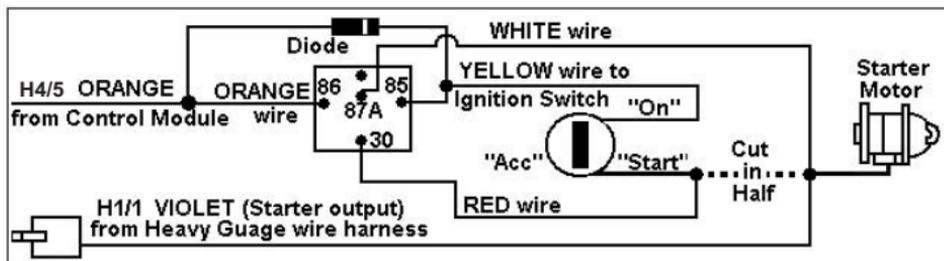

## H5 6-PIN BLACK CONNECTOR:

**H5/1 WHITE / BLACK Wire (Instant Start and Stop / Negative Door Input)**

**(-) Instant Start and Stop Input (Uncut (leave intact) the Violet wire Loop)**

This wire activates and deactivates the remote starter each time it sees a momentary **(-) negative** ground signal. This wire is used for testing purposes and to activate the remote starter from another source. **(See alarm feature #2 programming chart.)**

**(-) Negative Door Pin Input**

**(Cut the VIOLET Wire Loop / For Manual Transmission Vehicle Use Only)**

This wire is a **(-) negative** ground trigger input wire for **negative door pin switch** vehicles. Connect this wire to the **(-) negative** type door pin switch when installing on a manual transmission vehicle only.

**H5/2 VIOLET Wire (+) Positive Door Pin Input)**


**(Cut the VIOLET Wire Loop / For Manual Transmission Vehicle Use Only)**

This wire is the **(+) positive** trigger input wire for positive door pin switch vehicles. Connect this wire to the **(+) positive** type door pin switch when installing on a manual transmission vehicle. ( Mostly Ford Vehicles.)

**H5/3 GREY Wire (Negative Safety Shut Down or Hood Switch Wire)**

This wire provides an instant shutdown for the remote starter whenever it receives a **(-) negative** ground. Connect this wire to the hood pin or safety device you are using for the hood protection. This wire must be routed through a grommet in the firewall and connected to the hood pin switch.

**Important!** This connection is a safety wire and must be connected as shown and tested as specified. Failure to do so may result in personal injury or property damage. See detail of wiring in the following diagram. This wire may also be used if the vehicle brake light circuit switches ground to the brake lights. An isolation diode must be used for ground switched brake light circuits and must be connected to the output of the brake switch.

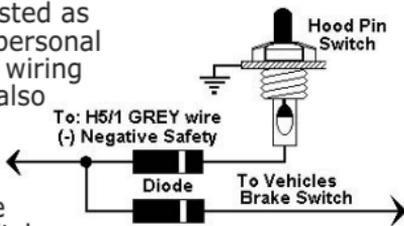


## H5/4 BROWN/RED (Positive Safety Shut Down or Brake Input)



This wire provides an instant shutdown for the remote starter whenever it receives **+12volts**. Connect this wire to the output or cold side of the brake switch that shows **+12volts** only when the brake is pressed. See below diagram

This wire provides an instant shutdown for the remote start, whenever it receives **+12volts**. If the brake lights switch in the vehicle switches **+12 volts** to the brake light circuit, connect this wire to the output side of the brake

switch. This will allow the remote start to shut down. If an attempt is made to operate the vehicle without the key while running under the control of the remote start. In most vehicles, in order to shift gear, the brake pedal must be depressed. The brake input will in turn cause the remote start unit to shut off. (See diagram.)

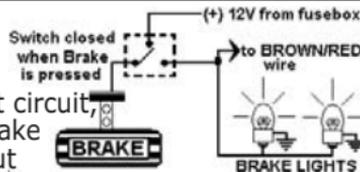

**Manual Transmission:** When you are in manual transmission gear mode, you also need to connect the **BROWN / RED** wire to the emergency or handbrake switch. An isolation diode must be used for handbrake circuit and brake light circuit. Most handbrake wires will show **+12V** at rest when the ignition is on and ground when you set the handbrake. However, if the handbrake wire shows **0V** while the handbrake is at rest, you will need to add a relay as shown in the diagram below.

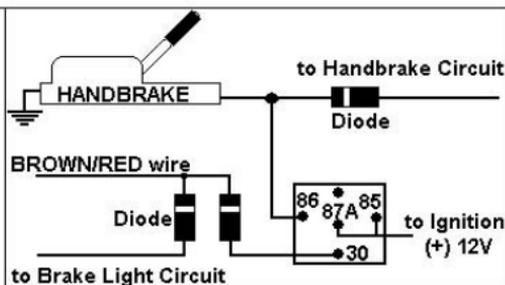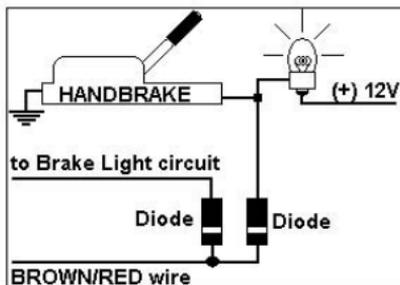

### **H5/5 Thin BLACK Wire ( Remote Start Enable or Neutral Safety Input)**

When the **Thin BLACK** wire is grounded, the remote start unit is operable. When this wire is open from ground, the remote starter is disabled.

1. The optional "**remote start toggle switch**" can be added on to this wire to temporarily disable the remote starter. This feature is useful if the vehicle is being serviced or stored in an enclosed area.
2. This wire can also be connected to the neutral safety switch wire in the vehicle.

**IMPORTANT NOTE: Directly connect the Thin BLACK wire to ground when not being used.**

### **H5/6 VIOLET / WHITE Wire (Tach. Input or Oil Sensor Connection) (Tach Input Connection)**

**Note:** No connection of this wire is required, if you are using the voltage checking type mode.

This input provides the remote start system with information about the engine's revolutions per minute (RPM). It can be connected to the negative side of the coil in vehicle with conventional coils.

To test for a tachometer wire, a multi-meter capable of testing AC voltage must be used. The tach wire will show between **1V and 6V AC** at idle, and will increase as the engine RPM increases. In multi-coil ignition systems, the control module can learn individual coil wires.

**IMPORTANT!** Do not test for tach wires with a test light or logic probe. How to find a tach wire with your multi-meter

1. Set the ACV or AC voltage (12V or 20V is fine.)
2. Attach the (-) probe of the meter to chassis ground.
3. Start and run the vehicle.
4. Probe the wire you suspect of being the tach wire with the red probe of the meter.
5. If this is the correct wire the meter will read between 1V and 6V.

**IMPORTANT NOTE: You must program the TACH SIGNAL before trying to remote start.**

**(See programming start feature #2.)**

## WIRING CONNECTIONS

### Oil Sensor Signal Connection

Locate the wire connected to the oil sensor on the dashboard.

**Negative Oil Sensor Connections:** +12volts to +14volts will show on the multimeter when the ignition switch is turned to the "on" position in the key cylinder and +2volts to +3volts when the motor is running.


**Positive Oil Sensor Connections:** +2volts to +3volts will show on the multimeter when the ignition switch is turned to the "on" position in the key cylinder and +12volts to +14volts when the motor is running.

**IMPORTANT NOTE:** You must program for oil sensing type before trying to remote start. (See programming start feature #2.)


### H6: 2-PIN BLUE CONNECTOR FOR THE PROGRAM / VALET SWITCH:

Select a mounting location for the switch that is hidden but easily accessible to the driver of the vehicle. Mount the valet switch in a hidden but accessible location. Route and plug in the valet switch wires to the control module.

### H7: 3-PIN DOOR LOCK CONNECTOR:

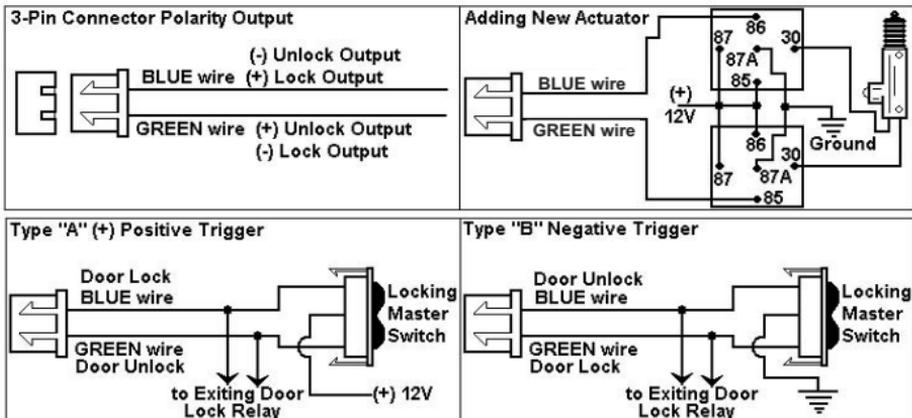


## WIRING CONNECTIONS

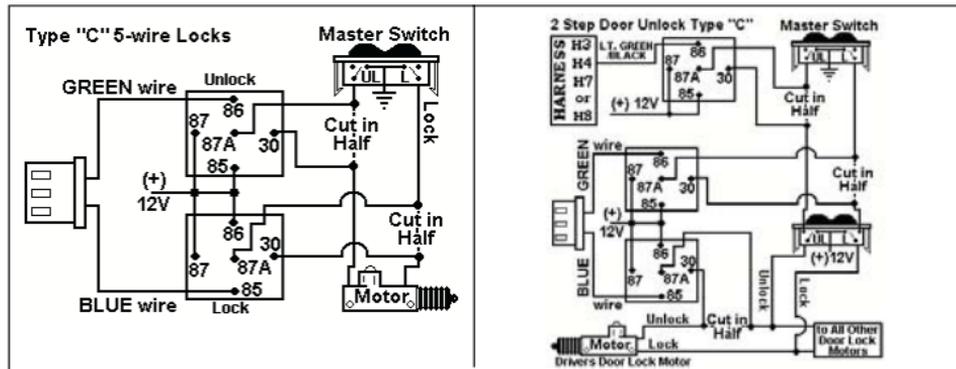


### VACUUM OPERATED DOOR LOCKING SYSTEM: TYPICAL OF MERCEDES BENZ AND AUDI.

Locate the wire under the driver's kick panel. Use the voltmeter connecting to ground, verify that you have the correct wire with the doors unlocked, the voltmeter will receive "12 volts". Lock the doors and the voltmeter will read "0 volt". Move the alligator clip to +12V and the voltmeter will receive "+12 volts". Cut this wire and make connections. Be sure to program the door lock timer for 3.5 seconds.

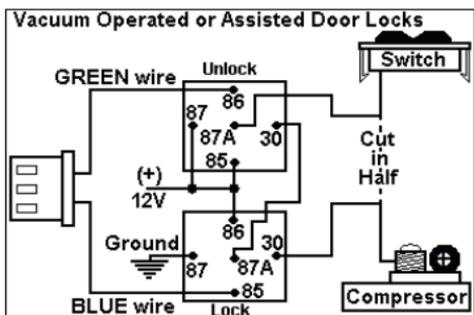

## WIRING CONNECTIONS

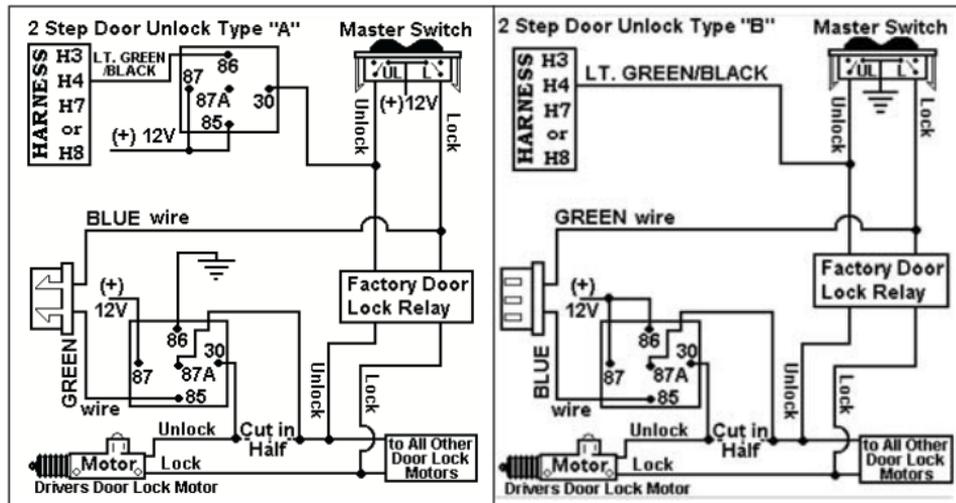

### H8: 3-PIN BLACK CONNECTOR (Windshield Receiver / Antenna)

The windshield receiver/antenna mounts on the inside of the front windshield. We suggest you mount it on the lower left or upper left-hand side of windshield.

**Warning!** Do not mount in such a manner that it obstructs the driver's view.

- The receiver/antenna whip must be vertical.
- Remove the protective tape backing and clean the area around the glass where you are installing
- Carefully align the receiver/antenna and apply to windshield.
- Route the black connector wire behind the trim and connect to receiver/antenna.
- Connect the other end to the control module.
- Special considerations must be made as some newer vehicles utilize a tinted window glass that can effectively reduce the range.

**Automatic transmission gear vehicle:** Uncut (leave intact) the "**VIOLET Loop Wire**". **Manual transmission gear vehicle:** Cut the "**VIOLET Loop Wire**" and tape the end.

**Note:** The system is not recommended for the manual transmission gear vehicles with removable tops.

**Note:** When installing this system on a vehicle with manual transmission the following must be hooked up:

1. "**Brake Light Circuit**" and "**Handbrake Circuit**". (See **H5/4 BROWN/RED** wire connection.)
2. Negative door pin switch (see **H5/1 WHITE/BLACK** wire connection.) or positive door pin switch (see **H5/2 VIOLET** wire connection.)

**Note: Vehicles with a manual transmission gear must use "Engine Checking Tach." Or "Engine Checking Oil Sensor." only. (See Start Feature Programming # 2 - 2)**

### PROGRAMMING A NEW TRANSMITTER:

**Note:** The control module will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.

1. Turn the Ignition switch from "**OFF**" to "**ON**" **3 times** and stay in the "**ON**" position.
2. **Within 15 seconds**, push the **valet/program switch 3 times** and on the **3rd push hold it** in until **(1) long chirp** from horn and the LED start to flash then release the **valet switch**. You are now in the **transmitter programming mode**.
3. Press and hold any button on the transmitter until **(1) chirp** from the horn and a flash from parking light confirming the first transmitter is now programmed.
4. If you have additional transmitters (**up to 4**) that need to be programmed, repeat step 3 for each transmitter.

**Exit:** Turn the ignition switch to the off position, or leave it for 15 seconds. **3 long chirps and 3 parking light flashes** will confirm programming exit.

### ALARM FEATURE. #1 PROGRAMMING:

1. Turn the Ignition switch from "**ON**" to "**OFF**" **3 times** and stay in the "**OFF**" position.
2. Push the **valet/program switch 2 times** and on **2<sup>nd</sup>** push hold it until **(1) chirp** followed with a long chirp is heard, then release the **valet/program switch**. You are now in the **alarm feature #1 programming mode**.
3. Press and release the transmitter button that corresponds to the feature you desire to program.

## PROGRAMMING AND TESTING

- a. The amount of horn chirps and LED pause will indicate the previous setting.
  - b. The factory default settings will always be **[1] LED flash** and **[1] horn chirp**.
4. Press the transmitter button again to change the feature. Simply keep re-pressing the transmitter button until the module advances to your desired programming setting.

### Example:

- a. After you here **(1) chirp**, press the button again and the module will advance to **[2] LED flashes** and **[2] horn chirps**.
- b. Press the button again, the module will advance to **[3] LED flashes** and **[3] horn chirps** etc.

### ALARM FEATURE #1 PROGRAMMING CHART

Press Transmitter Button	One Chirp with One LED Pulse Factory Default Setting	Two Chirps with Two LED Pulses	Three Chirps with Three LED Pulses
1	Chirps off	Chirps on	
2	Pathway Illumination feature "off"	Parking light "on" for 30-second following an unlock signal	Parking light "on" for 30-second upon an unlock signal & 10-second upon a lock signal
3	<b>H4/3 Lt Green/Black</b> Wire = Factory Security Disarm Signal Output	<b>H4/3 Lt. Green/Black</b> Wire=Dual Pulse Door Unlock Output	<b>H4/3 Lt. Green/Black</b> Wire=Start Status (Shock Sensor Bypass Control) Output
4	<b>H2/4 Brown</b> Wire=Horn Output	<b>H2/4 Brown</b> Wire=Channel 4 Momentary Output	<b>H2/4 Brown</b> Wire=Rearm Signal Output
5	<b>H4/2 Black/White</b> Wire= Channel 4 Momentary Output	<b>H4/2 Black/White</b> Wire=Dome Light Output	<b>H4/2 Black/White</b> Wire= Ground Output During Start (Crank)

**Exit:** Turn ignition switch to the on position, or leave it for 15 seconds. **3 long chirps** and **3 parking light flashes** will confirm programming exit.

## ALARM FEATURE. #2 PROGRAMMING:

1. Turn the Ignition switch from "ON" to "OFF" **3 times** and stay in "OFF" position.
2. Push the **valet/program switch 4 times** and hold the **4<sup>th</sup>** push in until **(2) chirps** followed with **(1) long chirp** is heard then release the **valet/program switch**. You are now in the **alarm feature #2 programming mode**.
3. Press and release the transmitter button that corresponds to the feature you desire to program..

## ALARM FEATURE #2 PROGRAMMING CHART

Press Transmitter Button	One Chirp with One LED Pulse Factory Default Setting	Two Chirps with Two LED Pulses	Three Chirps with Three LED Pulses	Four Chirps with Four LED Pulses
1 	0.9-second door lock pulse	3.5-second door lock pulse	Double pulse unlock	Door lock with "Comfort Feature"
2 	Ignition controlled door locks & unlocks	Ignition controlled door locks only	Ignition controlled door unlocks only	Without ignition controlled door locks & unlocks
3 	Without this feature	Door lock before start	Door lock after shut-down	Door lock before start and door lock after shut-down
4 * 	<b>H5/1 White/Black</b> Wire = 1 Pulse Remote Start	<b>H5/1 White/Black</b> Wire = 3 Pulse Remote Start		

**Exit:** Turn ignition switch to the on position, or leave it for 15 seconds. **3 long chirps** and **3 parking light flashes** will confirm programming exit.

### Comfort Feature:

Some vehicles have a special comfort feature. When you lock the driver's door with the key, and hold the key in the door for 5 to 7 seconds all the windows in the vehicle will roll up. If you would like to operate this feature with the remote transmitter, you can program the alarm feature # **2-1** to "comfort feature".

## REMOTE START FEATURE PROGRAM MODE.

### START FEATURE. # 1 PROGRAMMING:

1. Turn the ignition switch from "ON" to "OFF" **3 times** and stay in "OFF" position.
2. Push the **valet/program switch 8 times** and hold it in on the **8<sup>th</sup>** push until **(4) chirps** followed with a long chirp is heard then release the **valet/program switch**. You are now in the **start feature #1 programming mode**.
3. Press and release the transmitter button that corresponds to the feature you desire to program.

### START FEATURE CHART #1

Press Transmitter Button	One Chirp with One LED Pulse Factory Default Setting	Two Chirps with Two LED Pulses	Three Chirps with Three LED Pulses	Four Chirps with Four LED Pulses
1 	Gasoline Engine	Diesel Engine and 10 sec. warm-up timer	Diesel Engine & 15 sec. warm-up timer	Diesel Engine & 20 sec. warm-up timer
2 	20 Minute Run Time	30 Minute Run Time	5 Minute Run Time	10 Minute Run Time
3 	Factory Alarm Disarm with Channel 3 On	Without this Feature		
4 	Constant Parking Light Output	Flashing Parking Light Output		
5  + 	Press   button = Activate Remote Start	Press  +  button = Activate Remote Start	Press  button Activate Remote Start	

# PROGRAMMING

## START FEATURE CHART #1

Press Transmitter Button	One Chirp with One LED Pulse Factory Default Setting	Two Chirps with Two LED Pulses	Three Chirps with Three LED Pulses	Four Chirps with Four LED Pulses
6  +	The vehicle without Turbo Mode (The system cannot be Lock/Unlock with the engine running.)	The vehicle has aftermarket Turbo timer installed: The system can be Lock/Unlock with the engine running.	Built-in Turbo Timer Control is Active: Press  and  buttons at the same time to control engine running one minute.	Built-in Turbo Timer Control is Active: Press  and  buttons at the same time to control engine running three minutes.
		Five chirps = Built-in Turbo Timer Control is Active/ Press  and  buttons at the same time to control engine running five minutes.		
7  +	3 Hour Time Start	2 Hour Time Start		

**Exit:** Turn Ignition to the on position, or leave it for 15 seconds. **3 long chirps** and **3 parking light flashes** will confirm programming exit.

### SAFE START (Child safety mode)

Factory defaults setting to press the **button twice** to start the vehicle. Programming this feature to eliminate an accidental remote start, when kids enter this transmitter, it requires: The user presses the transmitter and **buttons** at the same time to start the vehicle.

### START FEATURE. # 2 PRORAMMING:

1. Turn the Ignition switch from "OFF" to "ON" **3 times** and stay in the "OFF" position.
2. Push the **valet/program switch 10** times and hold it in on the **10<sup>th</sup>** push until **(5) chirps** followed with a long chirp is heard and then release the **valet/program switch**. You are now in the **start feature #2 programming mode**.
3. Press and release the transmitter button that corresponds to the feature you desire to program.

## START FEATURE CHART #2

Press Transmitter Button	One Chirp with One LED Pulse Factory Default Setting	Two Chirps with Two LED Pulses	Three Chirps with Three LED Pulses	Four Chirps with Four LED Pulses
1	Exit the programming mode. (3 long chirps and 3 parking light flashes will confirm this exit.)			
2  +	Engine Checking Voltage	Engine Checking TACH / RPM Learning Mode	Engine Checking Negative Oil Sensor	Engine Checking Positive Oil Sensor
3	Start Timer: 0.6-second	0.8-second (2 chirps), 1.0-second (3 chirps) 1.2-second (4 chirps), 1.4-second (5 chirps), 1.6-second (6 chirps), 1.8-second (7 chirps), 2.0-second (8 chirps), 3.0-second (9 chirps), 4.0-second (10 chirps).		
4	Low check level	Hi check level		
5 * - *	Start or stop the system for TESTING AND ADJUSTMENT			

**Exit:** Press the button on the transmitter. **3 long chirps** and **3 parking light flashes** will confirm programming exit.

**IMPORTANT NOTE: You must program the "TACH SIGNAL" before trying to remote start.**

### ENGINE CHECKING TACH / RPM LEARN:

1. Turn the Ignition switch from "OFF" to "ON" **3 times** and stay in "OFF" position.
2. Push the **valet/program switch 10 times** and hold it until **five chirps** followed with **a long chirp** is heard then release the **valet/program switch**.
3. Press and release the transmitter and buttons at the same time twice (**2 LED flashes** and (**2 chirps** will confirm the system in features "RPM learning mode".
4. Within 10 seconds, start the vehicle with the key. (While the engine is running, the parking lights and LED light will flash, if they don't, please check your **VIOLET/WHITE** wire connection.
5. Press and hold the **valet/program switch** for 2 seconds until a long chirp and the LED light flashes constant for two seconds. The RPM signal is now learned.
6. Turn off the ignition switch to stop the engine from running.
7. If the crank time on the starter needs adjusted proceed to Crank Time Adjust.

## CRANK TIME ADJUST / HI OR LOW LEVEL CHECK

1. Press the **\* button twice** on the transmitter to start the vehicle.
2. If everything goes well:
  - a. Press the **\* button twice** on the transmitter to stop engine running. You have completed this programming successfully.
  - b. Press **🔒 button** on the transmitter to exit the program mode. There will be **3 long chirps** and **3 parking light flashes** for confirmation.
3. If the crank time is too short, (Engine not running, before the starter stops cranking):
  - a. Press the **\* button twice** on the transmitter to turn the ignition "OFF". Press **🔑 button** on the transmitter to set proper "Check Level" to Hi position. **(2) LED flashes** and **(2) chirps** will confirm this setting.
  - b. Repeat the step1 – 4.
4. If the crank time is too long, (Engine already successfully running, while the starter remains engaged):
  - a. Press the **\* button twice** on the transmitter to stop the engine running. Press **🔑 button** on the transmitter to set proper "Check Level" to Low position. **(1) LED flash** and **(1) chirp** will confirm this setting
  - b. Repeat the step1 – 4.

## ENGINE CHECKING VOLTAGE

1. Turn the ignition switch from "ON" to "OFF" **(3) times** and stay in "OFF" position.
2. Push the **valet/program switch (10) times** and hold it until **(5) chirps** followed by **(1) long chirp** is heard then release the **valet/program switch**.
3. Press the transmitter **🔒** and **🔑** buttons at the same time to set the "Voltage Checking Type". **(2) LED flashes** and **(2) chirps** will confirm this setting. **Once you complete step 3, you can adjust and test "Start Timer" as below:**

## START TIMER PROGRAMMING: (TEST and ADJUST)

1. **Press the \* button twice on the transmitter to start the vehicle**
2. If everything goes well: Wait for 15 seconds:
  - a. If the engine remains running.
    - I. Press the **\* button twice** on the transmitter to stop engine from running.
    - II. Press **🔒 button** on the transmitter to exit the program mode. There will be **(3) long chirps** and **(3) parking light flashes** for confirmation.

- b. If the engine shuts down after the vehicle has been started.
  - I. Press the **\* button twice** on the transmitter to turn ignition lights **"OFF"**.
  - II. Press **⏸ button** on the transmitter to set **"Check Level"** to **"LOW"** position. **(1) LED flash** and **(1) chirp** will confirm this setting
  - III. Repeat step 1 - 2.
3. **If the crank time is too long, (Engine is successfully running, while the starter is still cranking.):**
  - a. Press the **\* button twice** on the transmitter to stop engine running.
  - b. Press **⏸ button** on the transmitter to set proper **"Start Timer"**. The chirps and LED pause will confirm the starter diagnostics (**Decrease "Start Timer" is necessary.**)
  - c. Repeat the step 1 - 4.
4. **If the crank time is too short, (The engine did not successfully run before the starter quit cranking)**
  - a. Press the **\* button twice** on the transmitter to turn the ignition **"OFF"**.
  - b. Press **⏸ button** on the transmitter to set proper **"Start Timer"**. The chirp and LED pauses will confirm the starter diagnostics (**Increase "Start Timer" is necessary.**)
  - c. Repeat the steps 1-4.

### ENGINE CHECKING OIL SENSOR

1. Turn the Ignition switch from **"ON"** to **"OFF"** **(3) times and stay in the "OFF" position.**
2. **Push the valet/program switch (10) times and hold it until (5) chirps** followed by **a long chirp** is heard then release the **valet/program switch.**
3. Press the transmitter **⏸** and **⏸** **buttons** at the same time to set the **"Timer Checking Type"**. **(3) LED flashes, [3] chirps** will confirm this setting.
4. Press the transmitter **⏸** and **⏸** **buttons** at the same time to set the **"Oil Sensor Checking Type"**. **(4)/(5) LED flashes, (4)/(5) chirps will confirm this setting.**
5. Once you complete step 4, you can adjust and test **"Start Timer"** as follows:

**START TIMER PROGRAMMING: (TEST and ADJUST)**

1. Press the **\* button twice on the transmitter to start the vehicle.**
2. If everything goes well:
  - a. Press the **\* button twice** on the transmitter to stop engine running. You have completed this programming successfully.
  - b. Press **🔒 button** on the transmitter to exit the program mode. There will be **(3) long chirps and (3) parking light flashes** for confirmation.
3. If the crank time is too long, **(The engine is successfully running, while the starter is still cranking.)**
  - a. Press the **\* button twice** on the transmitter to stop engine running.
  - b. Press the **🔒 button** on the transmitter to set proper **"Start Timer"**. The chirp and LED pauses will confirm the starter diagnostics. **(Decreasing the "Start Timer" is necessary.)**
  - c. Repeat the step1 - 4.
4. If the crank time is too short, **(The engine did not successfully run before the starter quit cranking)**
  - a. Press the **\* button twice** on the transmitter to turn **"OFF"** the ignition.
  - b. Press **🔒 button** on the transmitter to set proper **"Start Timer"**. The chirp and LED pauses will confirm the starter diagnostics **(Increasing the "Start Timer" is necessary.)**
  - c. Repeat the step1 - 4.

**RETURN TO FACTORY DEFAULT SETTING:**

**Note: This will reset all alarm features to factory default settings**

1. Turn the ignition from **"ON" to "OFF" (3) times** and stay in the **"OFF" position.**
2. **Push the valet/program switch (12) times and hold it until (6) short chirps** followed by **(1) long chirp** is heard.

Press and hold the **🔒** and **🔑** **buttons** at the same time on the transmitter for 6 seconds, there will be a confirmation of **(6) short chirps with (3) long chirps** to confirm the system **Alarm Features # 1 and # 2 programming** all return to factory default settings.

**Note: This will reset all remote starter features to factory default settings.**

## PROGRAMMING

1 Press the **🔑 button** first, within 3 seconds press and hold the **🔒** and **🔑** buttons at the same time on the transmitter for 6 seconds, there will be a confirmation of **(6) short chirps followed by (3) long chirps** to confirm the system **Start Feature #1 and #2 programming** will return to factory default settings.

**To Exit:** Turn Ignition to the on position, or leave it for **15 seconds**. **Three long chirps and (3) parking light flashes** will confirm programming exit.

### SHUTDOWN DIAGNOSTICS

**The unit has the ability to diagnose and report the cause of the last shutdown on the remote start system.**

**Enter:**

1. Turn the Ignition switch to the **"ON"** position.
2. Press the **🔑 button** on the transmitter
3. The LED will now report the last system shutdown by flashing for one minute in the following grouped patterns

LED Flashes	Shutdown Mode	
1	(-) Safety Shutdown Input (Hood)	1.Close the Hood 2.Check <b>H5/3 GREY</b> wire connection
	(+) Safety Shutdown Input (Brake) or Hand Brake (if installed or	3.Set the Hand Brake (if installed) 4.Check <b>H5/4 BROWN/RED</b> wire connection 3.
	Neutral Safety Switch input fail	5.Move the Enable Toggle Switch to <b>"ON"</b> position. (if installed) 6.Move the gear selector to "Park"/"Neutral" position. 7.Check <b>H5/5 thin BLACK</b> wire connection.
3	No RPM (Engine Checking TACH) or	Check <b>H5/6 VIOLET/WHITE</b> wire connection.
	Low Voltage. (Engine Checking Voltage) or	Program the <b>"CHECK LEVEL"</b> from "Hi Check Level" to "Low Check Level"
	Oil Sensor (Engine Checking Oil Sensor)	Check <b>H6/6 VIOLET/WHITE</b> wire connection.

## PROGRAMMING

LED Flashes	Shutdown Mode	
5	Over-rev	
6	System timed out	
7	Transmitter	
8	Tach. Signal has not been learned	Re-learning the RPM (Start feature #II-2)
9	The procedure of the Engine start memorizing for the vehicle with manual transmission gear is not completed.	Check Operation Manual Remote Start Operation B section.

## TESTING YOUR INSTALLATION

**Caution!!** The follow procedure must be performed after the installation of the remote start device. It is the responsibility of the installing technician to complete these tests. Failure to test the unit in the following manner may result in personal injury, property damage, or both.

1. Test the brake shutdown circuit: With the vehicle in park (P), start the vehicle using the remote transmitter. Once the engine is running, press the brake pedal. The vehicle should shut down immediately. If the vehicle continues to run, check the brake circuit **BROWN/RED** wire (**H5/4**) connection.
2. Test the hood safety shutdown circuit: Start the vehicle using the remote transmitter. Once the engine is running, pull the hood release and raise the hood. The vehicle should shut down immediately. If the vehicle continues to run, check the hood pin **GREY** wire (**H5/3**) connection.

### NEUTRAL START SAFETY TEST:

1. Set the vehicle parking brake.
2. Block the drive wheels to prevent vehicle movement.
3. Sitting in the vehicle, turn the ignition switch to on or run position, but do not start the engine.
4. Step on the brake pedal and shift the gear selector into "**DRIVE**" (D).
5. Put your foot over the brake pedal but do not press down on it. Be ready to step on the brake to shut down the remote start device.

6. Start the vehicle using the remote transmitter.
  - a. If the starter does not engage, the test is complete.
  - b. If the starter engages, immediately step on the brake pedal to shut down the system and check your **VIOLET** wire **H1/1** starter output connection. The heavy gauge **VIOLET** wire must be connected to the ignition switch side of the neutral safety switch. If the vehicle you are working on does not have an Electrical Neutral Safety Switch, it will be necessary to reconfigure the remote starts wiring to accommodate this vehicle. The information concerning the mechanical neutral safety switch provided below will help you to determine if the vehicle you are working on has this type of safety switch and will provide alternate wiring methods to accommodate this situation.

### **MECHANICAL NEUTRAL SAFETY SWITCH CONSIDERATIONS:**

Mechanical neutral safety switch configurations differ slightly in that they do not offer the same level of safety when installing a remote start device. Often when the ignition switch is turned off while the gear selector is in any position other than park or neutral, the mechanical function will not allow the key to be turned to the start position or removed from the ignition cylinder. This configuration prevents mechanical operation while the vehicle is in gear but offers no consideration for the electrical operation. Because of this potential problem, your installation requires the additional connection of a safety wire from the remote start device to the vehicle PARK/NEUTRAL ECM input or the vehicle key in sensor wire. This connection will prevent remote start operation if the key is left in the ignition switch regardless of the gear selector position.

### **PARK/NEUTRAL ECM INPUT:**


The Park/Neutral ECM input is the preferred method of installation. This not only maintains the integrity of the factory circuit but is also the easiest to install, providing the vehicle you are working on has this ECM input.

The installation required for this application (shown below), is a slight reconfiguration of the control switch wiring. Shown is a typical GM Park/Neutral ECM input circuit. To connect the remote start unit to the GM Park/Neutral ECM input:

1. Locate the **ORANGE/BLACK** reference wire in the "C2" connector found at the ECM in GM B Body vehicles or, locate the equivalent reference wire in the vehicle you are installing the remote start unit in.
2. Connect the **thin BLACK** Neutral Safety Switch wire (**H5/5**) to this reference wire.

## TESTING YOUR INSTALLATION

**NOTE:** If the optional remote starter enable toggle switch is installed, connect the one side of the switch to this reference wire the other side of to the **thin BLACK** Neutral Safety Switch wire (**H5/5**) of the remote start unit. The reference diagram below shows a typical GM B Body ECM reference wire and how to connect it to the remote start unit.

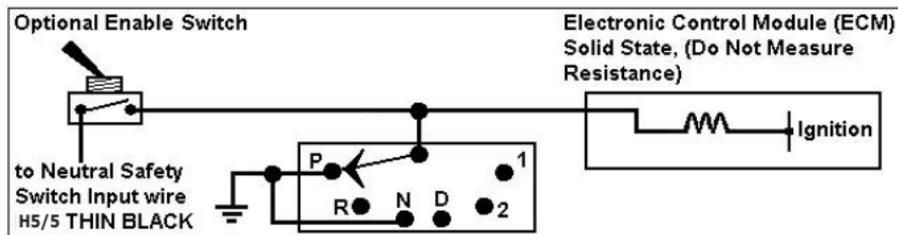

### KEY IN SENSOR CIRCUITS:

If the vehicle you are working on does not have or you cannot locate the ECM reference wire, there are two alternatives available. Although not preferred, the vehicle key in sensor may be reconfigured to allow a margin of safety and will prevent the vehicle with a mechanical neutral start switch from starting in gear.

**WE ADVISE THAT YOU MAINTAIN THE FACTORY CIRCUIT WHENEVER POSSIBLE.** The following two circuits may be used only if the above circuit is not available.

**NOTE:** When completing an installation using either of the following key in sensor circuits, if the operator inserts the ignition key while the vehicle is running under the control of the remote start, the vehicle will shut down. This must be explained to the operator as it is in contrast to the normal operation of a vehicle utilizing an electrical neutral start switch and is inconsistent with the operator's manual.


**Method 1** will allow the safety required for the remote start unit and prevent the vehicle from starting while in any gear other than Park or Neutral while the key is in the ignition cylinder however, if the key is left in the ignition switch and the door is left opened, the added relay will be energized causing a 150mA drain on the battery.

**Method 2** will allow the safety required for the remote start unit and prevent the vehicle from starting while in any gear other than Park or Neutral while the key is in the ignition cylinder however, the original factory key in chime module will not alert the owner that the key has been left in the ignition switch. In addition, this may also affect other warning tones such as the light on reminder.

### Note:

Additional information concerning key in sensor methods 1 and 2 are listed below and should be reviewed before considering either alternative.

### METHOD 1

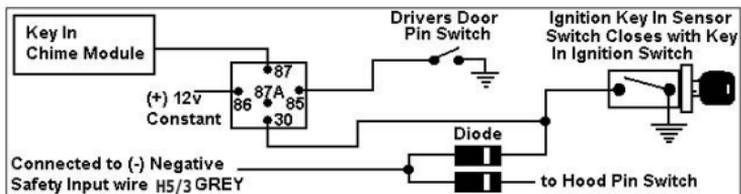


### To connect to the key in sensor as shown in method 1:

- Locate the control wire that connects the driver's door pin switch to the key in sensor switch.
- Cut this wire and connect the ignition cylinder side to a chassis ground.
- Locate the key in sensor switch wire that connects the chime module to the ignition cylinder.
- Cut this wire and connect the ignition cylinder side to terminal 30 of a P&B VF45F11 or equivalent relay.
- Connect the cathode (striped) side of a 4003 series diode to this same wire, and connect the (non striped) side to the negative safely input wire **(GREY) (H5/3)** of the remote start unit.
- Connect terminal 86 of the relay to a fused + 12 volt constant battery source.
- Connect terminal 87 of the relay to the chime module side of the previously cut wire in step D.
- Connect terminal 85 of the relay to the driver's door side of the pin switch wire previously cut in step B.

**Note:** A second **4003 series diode** may be required to maintain the integrity of the hood open, shut down circuit. If this is the case, it must be installed as shown in the diagram above. The anode (Non Stripped) side must be connected to the **GREY** wire (**H5/3**) of the remote start unit. The cathode (Striped) side must be connected to the hood pin switch.

### METHOD 2

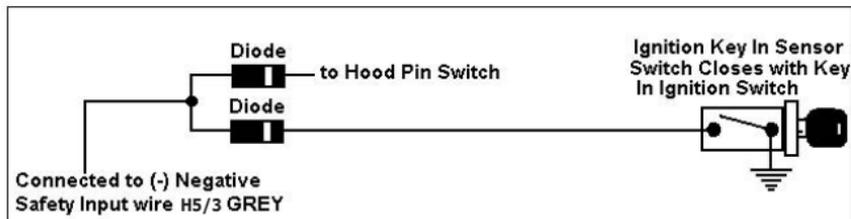

#### To connect to the key in sensor circuit as shown for method 2:

- Locate the control wire that connects the driver's door pin switch to the key in sensor switch.
- Cut this wire and connect the ignition cylinder side to chassis ground.
- Locate the key in sensor switch wire that connects the chime module to the ignition cylinder.
- Cut this wire and connect the ignition cylinder side to the Remote Start Negative Safety Shut down wire **GREY (H5/3)**, using a **4003 series diode** as shown above.

**Note:** A **second 4003 series diode** may be required to maintain the integrity of the hood open, shut down circuit. If this is the case, it must be installed as shown in the diagram above. The anode (Non Stripped) side must be connected to the **GREY** wire (**H5/3**) of the remote start unit. The cathode (Striped) side must be connected to the hood pin switch.

**AFTER THE CONNECTION OF THE NEUTRAL START SAFETY WIRE AS INDICATED IN ANY OF THE PREVIUOS ALTERNATE CONFIGURATINS, THIS CIRCUIT MUST BE TESTED FOR OPERATION.**

**Retest by following the steps outlined in the NEUTRAL START SAFETY TEST shown in this manual.**



©2004 JBS Technologies  
225 Technology Way • Steubenville, OH 43952  
[www.alertautomotive.com](http://www.alertautomotive.com)

Made in Taiwan