

ALERT



Owners Manual

www.alertautomotive.com

550R LCD



INSTALLATION TIPS AND ACCESSORIES

For most vehicles we have a T-Harness available to make remote starter installation quicker and easier. To order call 800-659-0764 or visit us online at www.directwholesale.net.

Additional remote transmitters can be purchased through direct wholesale at www.directwholesale.net.

Your Alert remote starter is equipped with an interactive install cd and installation kit. The kit will consist of a computer friendly test light, wire ties and a roll of tape. Use only the computer friendly test light or volt meter when testing and probing wires.

For Technical assistance www.alertautomotive.com can provide a detailed wiring diagram for your vehicle including additional helpful install tips.

JBS Technologies
225 Technology Way
Steubenville, OH 43952

WARNINGS

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. The vehicle windows must be rolled up.
7. Should the unit malfunction, disconnect the fuse until the problem is corrected.
8. The use and operations of this system is the sole responsibility of the operator.
9. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.
10. Do not start the vehicle by remote while the standard transmission vehicle is parked at a steep place.

TABLE OF CONTENTS

A.	TRANSMITTER OPERATION	5
B.	2-WAY LCD REMOTE CONTROL TRANSCIEIVER OPERATION	5
C.	LED DISPLAY	6
D.	CHIRP INDICATOR	6
E.	PARKING LIGHT.....	6
F.	SYSTEM OPERATION CONDITION	6
G.	ACTIVE ARMING - ARM & LOCK	6
	Ajar Warning	
	Silent Arming / Disarming	
	Shock Sensor By-Pass	
	Noiseless Mode	
	Hidden Alarm Function	
H.	PASSIVE ARMING.....	7
	Passive Arming with Passive Door Locking	
	Passive Arming By-Pass	
I.	ACTIVE DISARMING - UNLOCK & DISARM	7
	Pathway Illumination	
	Two Steps Door Unlock	
	Automatic Re-Arm	
J.	DISARMING WITHOUT A TRANSMITTER	8
	Overrides the Alarm without Password Pin Code	
	Overrides the Alarm With Password Pin Code	
K.	VALET MODE	8
	Enter Valet Mode	
	Exit Valet Mode	
	Remote Valet Mode	
L.	CAR LOCATOR	9
M.	PANIC FUNCTION	9
N.	SYSTEM T STATUS CHECK	9
O.	DRIVER PAGING	10
P.	DOME LIGHT CONVENIENCE DELAY & SUPERVISION	10
Q.	IGNITION CONTROL POWER LOCK/UNLOCK	10
R.	TRUNK RELEASE (CHANNEL 3) OUTPUT	10
S.	CHANNEL 4 TIMMER CONTROL OUTPUT.....	11
T.	CHANNEL 5 TIMER CONTROL OUTPUT.....	11
U.	CHANNEL 6 TIMER CONTROL OUTPUT	11

REMOTE START OPERATION

A.	TO REMOTE START THE VEHICLE	11
B.	ENGINE START MEMORIZING FOR THE VEHICLE WITH STANDARD	12
C.	TO OPERATE THE VEHICLE WHILE RUNNING ON THE REMOTE START	13
D.	TEMPORARY STOP FEATURE	14
E.	TURBO TIMER MODE.....	14
F.	TIMER/TEMPERATURE START	14
G.	TEMPERATURE CHECK	16
H.	TO TURN OFF THE REMOTE START.....	16
I.	SHUT-DOWN INPUT FOR REMOTE STARTER.....	16
J.	DISABLING THE REMOTE START SYSTEM.....	17

LCD REMOTE TRANSCEIVER

A.	BATTERY REPLACEMENT	18
B.	THE REMOTE LCD ICONS WITH FUNCTION	18
C.	PROGRAMMING OF THE LCD REMOTE TRANSCEIVER	19
	1. Screen Lamp ON	
	2. Clear the Flash Icon and Melody Sound	
	3. Stop the Trigger Melody Sound	
	4. Vibration/Melody Mode	
	5. Low Battery Indication	
	6. Set Up Fixed Count Down (Parking) Timer	
	7. Out of Range Indication	
D.	TIMER SETTING	21
	1. Timer Setting.	
	2. Alert Alarm Timer Setting	
	3. Count Down Timer Setting	
	4. Time Set-up for Daily Timer Start	

OPERATION**A. TRANSMITTER OPERATION:**

Transmitter Button	System Function	Remark
	Lock Doors & Arm System	
	Car Locator	Upon armed
	Panic function	Press and Hold for 3 seconds
	Silent Arming / Disarming	Ignition in "off" position
	Unlock Doors & Disarm System	
	Two Steps Door Unlock & Disarm System	Press twice within 3 seconds
	Trunk Release (Channel 3)	Press and Hold for 2 seconds
	Passive Arming By-pass	While the system Disarmed
	Remote Control Entry/Exit Valet Mode	While the system Disarmed, Press within 3 seconds
	Activate or Turn Off the Remote Start	Press twice within 3 seconds
	Channel # 4 Timer Output	
	Channel # 5 Timer Output	
	Channel # 6 Timer Output	

B. 2-WAY LCD REMOTE CONTROL TRANSCEIVER OPERATION ONLY:

Transceiver Button	System Function	Remark
F - F - (C)	System's Status Check	Press within 3 seconds
F - (!)	Monitor Indoor Temperature	Press within 3 seconds
F - * (☺)	Daily Timer Start	Press within 3 seconds
F (1 second)	LCD screen lamp turns on for 5 seconds	Press and hold for 3 seconds
F - F - F	Clear the Flashing Icon and Melody Sound on the LCD Screen Transmitter	Press within 3 seconds

C. LED INDICATORS

LED	Status
Off	Disarmed
Slow flash	Armed
Flash	Passive Starter Disabled
Fast flash	Passive arming
On (solid)	Valet mode

D. CHIRP INDICATORS

Chirp	Function
1 chirp	Arm
2 chirps	Disarm
3 chirps	Ajar Warning
6 chirps	Car locator

E. PARKING LIGHT

Parking Light	Function
1 flash	Arm
2 flashes	Disarm
12 flashes	Car locator
Constant On	Under Remote Start

F. SYSTEM OPERATING CONDITION

	Horn	Parking Light	LED	Doors	Starter	Dome Light
1. Arming	1 or 3 Chirps	1 Flash	Slow Flash	Locking	Disable	
2. Disarming	2 or 4 Chirps	2 or 3 Flashes		Un-locking		Turns on for 30-second
3. Passive Starter Disable			Fast Flash		Disable	
4. Panic	Alarming	Flashes				Flashes
5. Car Locator	6 Chirps	12 Flashes		Locking		

G. ACTIVE ARMING - ARM & LOCK:

- Press  button on the transmitter.
- The horn will chirp once and parking light will flash once indicating that the system is now

System Arm



Door Ajar



armed. The vehicle doors will lock upon arming when interfaced with the security system.

Clear The Flashing Icon: Press the **F** button 3 times within 3 seconds will clear the flashing icon on the LCD screen transceiver.

AJAR WARNING: If the siren sounds 3 chirps, then you have left a door, trunk, or hood lid ajar.

H. PASSIVE ARMING

Active arming / disarming is controlling your security system via the remote transmitter. This security system is equipped with an optional Passive Arming feature, which allows the security system to arm 30 seconds after the last door is closed. Operation is as follows.

- Turn the ignition to the "OFF" position and exit the vehicle.
- After all entrances are closed, the security system LED will flash fast for 30 seconds. If you reopen any door / hood / trunk, the security system LED will stop flashing. It will begin flashing again once the vehicle all entrances are closed.
- After 30-second timer has elapsed, the security system will automatically "ARM". The siren will chirp [1] time and the parking lights will flash [1] time.

PASSIVE ARMING WITH PASSIVE DOOR LOCKING: The vehicle doors will automatically lock after passive arming cycle has been completed.

PASSIVE ARMING BY-PASS: While the system disarmed, Press the  button twice, the security will respond with [1] chirp and LED will turn "ON". The security system will remain in this temporarily state for as long as you wish. To exit passive by-pass, press the transmitter  or  button and the system will return to normal status.

I. ACTIVE DISARMING - UNLOCK & DISARM:

- Press  button on the transmitter.
- The horn will chirp twice and parking light will flash twice to indicating that the security sys-

tem is now disarmed. The vehicle doors will unlock and dome light will turn on for 30 seconds upon disarming when interfaced with the security system.

System Disarm



PATHWAY ILLUMINATION This feature turns the parking light "ON" for 30 seconds upon a unlock signal and for 10 seconds upon the lock signal.

TWO STEP DOOR UNLOCK: This feature will independently unlock the drives door only when disarming the security system. Pushing the  button on the transmitter a second time within 3 seconds will unlock the entire vehicle.

AUTOMATIC RE-ARM (See Feature "1 - 2" Programming): If this feature is selected, the security system will automatically re-arm itself 60 seconds after disarming with remote transmitter. Automatic rearm will cancel if any door is opened before the 60 seconds timer has elapsed.

J. DISARMING WITHOUT A TRANSMITTER

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to 'ON' position. (Alarm will sound.)
2. Within 10 seconds push and release the valet switch

The alarm will stop sounding and enter the disarm mode. You can now start and operate the vehicle normally.

K. VALET MODE: (System in Disarm or Valet mode)

The valet switch allows you to temporarily bypass all alarm function, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm function is bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be disarmed either by using you remote transmitter, or by operating the Manual override sequence.

Enter Valet Mode:

1. From the disarmed condition, turn the ignition to "ON" position.
2. Push and hold valet switch for 2 seconds until the LED turns on. The LED wills remain on as long as the system is in 'valet mode'.

Remote Door Lock



Remote Door Unlock



Exit Valet Mode:

1. Return to normal operation, turn ignition 'on'.
2. Push and hold valet switch for 2 seconds, The LED will turn off indicating the system is exiting the valet mode.

REMOTE VALET: (System in Disarm or Valet mode)

Press and release  button on the transmitter three times within 3 seconds to enter / exit valet mode. A parking flash to confirm enters valet mode and two parking lights flashing to confirm exit valet mode.

L. CAR LOCATOR

Press the  button to activate the car locator function. The siren will chirp 6 times. The parking light will flash 12 times, for you to easily locate your car.



M. PANIC FUNCTION:

The transmitter can be used as a remote panic switch to manually trigger the alarm in case emergency.

1. Press and hold the  button for 3 second. The alarm will immediately sound.
2. During panic mode, the normal function of this transmitter button will be suspended. The  and  buttons can be used to lock and unlock the doors (if the option is installed), however once the  button is pressed, the vehicle's starter disable device, (where installed) will be disabled allowing the vehicle to start.
3. To stop the alarm, press and hold the  or  button on the transmitter again for 3 seconds. Also if any transmitter button other than  or  button is pressed and released, the panic mode will be turned off immediately.
4. If the button is not pressed, the alarm will automatically stop after 30 seconds.



N. SYSTEM'S STATUS CHECK

(For two-way transceiver operation only)

When you want to check the system's present status through the LCD screen, Press the transceiver **F** button twice, within 3 seconds press  (**C**) button. It responds with one melody sound, the LCD screen should be illuminated.

O. DRIVER PAGING

(For two-way transceiver operation only)

It is useful the event that someone wants to page the driver of the parked vehicle. Under the ignition switch "off" condition, press and hold the valet switch for 2 seconds to page the driver, one chirp sound shall be emitted from the vehicle and the paging melody sound continues you Remote LCD transceiver and  indication flashes on the LCD screen.

P. DOME LIGHT CONVENIENCE DELAY & SUPERVISION

Upon disarming, the interior lights will remain on for 30 seconds. Note: Turn ON the ignition switch or arm the alarm will turn off the dome light.

Q. IGNITION CONTROL POWER DOOR LOCK/UNLOCK

If the vehicles door locks have been interfaced to the system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and/or unlock the vehicle's doors when the ignition is turned "OFF".

R. TRUNK RELEASE (CHANNEL 3) OUTPUT

Press and hold the  button on transmitter for two seconds to remote control the trunk release or other electric devices.



S. CHANNEL 4 TIMER CONTROL OUTPUT

Press the transmitter  (4) and the  (4) buttons at the same time to activate Channel 4 function. Channel 4 is user-programmable timer output. You may program the built-in timer to send a ground signal for any time interval between 1 second and 2 minutes. For instance, this timer output may be used to turn on the headlight, power window or sunroof. (Factory defaults setting at momentary output.)



T. CHANNEL 5 TIMER CONTROL OUTPUT

Press the transmitter  (5) and the  (5) buttons at the same time to activate Channel 5 function. Channel 5 is user-programmable timer output. You may program the built-in timer to send a ground signal for any time duration from 1 second to 120 seconds. For instance, this timer output may be used to turn on the headlight, power window or sunroof. (Factory defaults setting at momentary output.)



U. CHANNEL 6 TIMER CONTROL OUTPUT

Press the transmitter  (6) and the  (6) buttons at the same time to activate Channel 6 function. Channel 6 is user-programmable timer output. You may program the built-in timer to send a ground signal for any time duration from 1 second to 120 seconds. For instance, this timer output may be used to turn on the headlight, power window or sunroof. (Factory defaults setting at momentary output.)



REMOTE START OPERATION

A. TO REMOTE START THE VEHICLE:

1. When you want to start your vehicle,
2. Press  button twice on the transmitter
3. The parking light will activate to indicate the remote start received the signal. (A melody sounding from your Remote LCD transceiver and  " icon will flashes on the LCD screen to confirm the remote start was activated.)
4. The engine will start approximately 5 seconds.

- Once the engine is running, after couple seconds the parking light will turn on again
- and climate controls will activate and adjust the vehicles interior temperature to your
- preset setting. (While the vehicle is running, the “” icon and the “minutes” digit on the LCD screen will flash and it will indicate count down timer based on the 5, 10, 20 or 30 minute run time set up by your installation center.)
- The vehicle will run for 5 to 30 minute cycle and automatically shut down. (When the unit shuts off the count down timer will turn off and the transmitter will play a melody.)

Activate Remote Start



Enaine Running



Note: The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

- The hood is opened.
- The brake pedal is pressed.
- Move the optional remote start enable toggle switch to OFF position. (If installed)
- The gear selector is in any gear other than “PARK” or “NEUTRAL”
- Pull down the hand brake. (for Standard Transmission Gear Vehicle)

SAFE START (Child safety mode)

Factory defaults setting to press the  button twice on the transmitter to start the vehicle. Programming this feature to eliminate an accidental remote start. It requires the user presses the transmitter  and  buttons at the same time to start the vehicle.

B. ENGINE START MEMORIZING FOR THE VEHICLE WITH STANDARD (MANUAL)

TRANSMISSION GEAR (Cut the VIOLET LOOP WIRE for Standard transmission gear vehicle)

The system senses the neutral transmission gear position automatically and there is no prior set-up required. The system in the standard transmission vehicle operates as following process when you exit the vehicle to sense and memorize the neutral transmission gear position. If the vehicles are of automatic transmission gear, this process is omitted.

- While engine is running by ignition key, pull up the hand brake and place the transmission gear in the neutral position.
- Before turning off the engine, press the  button twice on the transmitter.
-- The LED indicator will flash 3 times to confirm enter.
- Pull off the “Ignition Key” from the key cylinder.
-- Engine continues running until the pre-programmed time elapsed or shutdown input is received.--
- Exit from the vehicle and Close all doors.
-- The engine still continues running and it is normal operating process.--
- Within 1 minute from the time of step 1, press the  button on the transmitter to lock the doors.
- 6-1. If the engine shuts down immediately and the system is now ready for next remote (or programmable) engine starts.
- 6-2. If the engine not shuts down immediately, the system is failed in engine start memorize set up, repeat above process again.

If the door is opened after above process, the prior memorization for the next remote or programmed engine start sequence is delete and the function shall not work until you repeat above process again.

Note: If the engine start memorize is set up, the dome light convenience delay function will be temporarily By-pass.

C. TO OPERATE THE VEHICLE WHILE RUNNING ON THE REMOTE START:

To operate the vehicle while engine running on the remote start.

- Insert the ignition key and turn it to “ON” (not the start) position.

2. Press the brake pedal.

Note: If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

D. TEMPORARY STOP FEATURE:

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the motor running and the climate control on.

1. Before turning off the engine, press the * button twice on the transmitter and the LED indicator will flash 3 times to confirm enter.
2. Turn the ignition key to OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapsed or shutdown input is received.

Note: For Standard Transmission Gear Vehicle: Before press the * button, Pull up the hand brake first.

E. TURBO TIMER MODE:

Turbo timer mode keeps the engine running after arriving at you destination for a programmable period of 1/ 3 or 5 minutes, This allows the system's time to conveniently cool down the turbo after you have left the vehicle. To activate:

1. While engine is running, place the transmission gear in the park position and pull up the hand brake.
2. Before turning off the engine, press and release  and * buttons at the same time.
-- The parking light will turn on to indicate the remote start has entered turbo charge mode. --
3. Pull off the "Ignition Key" from the key cylinder.
-- Engine keeps running. --
4. Exit and secure the vehicle.
-- Engine continues running until the pre-programmed time elapsed. --

F. TIMER / TEMPERATURE START:

This unit can be programmed to start and run the engine every 3 hours or punctually at the same time next morning, The engine will run for the programmed running time and then shut down.

IMPORTANT: Timer Start should be used only in open areas, Never start and run the vehicle in on enclosed space as a garage or carport.

3 hours timer start with Temperature-control OFF: This feature is design for an extreme cold climate usage. The system will auto start the vehicle every 3 hours, to prevent engine freezing and hard to start.

A MAXIMUM OF SIX CYCLES CAN OCCUR.

3 hours timer start with Temperature-control: If you programmed the temperature ON to operate. The system can be programmed to automatically start the vehicle engine whenever the temperature inside the vehicle reaches or drops below the preprogrammed temperature level. The system will monitor the air temperature every 3 hour and will only start the engine during extreme cold temperatures. There is three-temperature level to choose form.

Daily Timer Start: The feature is very useful for the driver who wants to run the vehicle punctually at the same time next morning. Before set-up of the "Daily Timer Start", you should set you time for engine start. (see Timer Setting / Timer set-up for "Daily Timer Start, page 20)

ENTER:

1. Press the * button twice to remote start the vehicle. As soon as the vehicle is running and the parking light have turned on or flashing.
 2. Immediately depress the  button once, within 2 seconds
 - 3-a. **3 Hours Timer Start:** Rapidly depresses the * button. The parking light will flash (3) times. The siren or horn chirps (3) times. The vehicle is now programmed to start every 3 hours.
 - 3-b. **Daily Timer Start:** Depress the transceiver **F** button first, within 3 seconds press * () button. The parking light will flash (6) times. The siren chirps (6) times. The vehicle is now programmed to start at the real time of the of the next day. Your set time for the next day engine start flashes for approx. 3 seconds on the LCD screen. After 3 seconds the  icon stays displayed on the LCD screen.
4. Press the brake pedal to stop the vehicle running.

Exit the timer start:

Timer start can be exited manually as follows:



1. Make sure the remote start system is not operating the engine.
2. Turn the ignition on. The LED and parking light will flash (4) times. The horn chirps (4) times.

OR

1. Press the * button twice to remote start the vehicle. As soon as the vehicle is running and the parking light have turned on or flashing.
2. Immediately depress the button then press and hold the * button for 2 seconds. The parking light will flash (4) times. The siren or horn chirps (4) times. The vehicle is no longer programmed to start automatically.

G. TEMPERATURE CHECK

You can monitor through the LCD screen, the present indoor temperature of the passenger compartment before cooling or heating your vehicle.

Press the transceiver F button first, within 3 seconds press the button (); the in-door temperature will be shown on the LCD screen. This reading may be higher than actual ambient temperature due to the greenhouse and is relative only the inside vehicle temperature.

H. TO TURN OFF THE REMOTE START:

When the engine is running (by remote start), if you want to stop it,

1. Press button twice on the remote transmitter under remote start mode.
2. Move the optional remote start enable toggle switch to OFF position. (If installed)
3. Press the brake pedal
4. Pull down the hand brake. (for Standard Transmission Gear Vehicle)

The vehicle will shut down and turn off the parking light to indicate engine stopped.

I. SHUT-DOWN INPUT FOR REMOTE STARTER:


If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:

1. The hood is opened.
2. The brake pedal is pressed.
3. The hand brake is released (for Standard Transmission Gear Vehicle)
4. Engine is over-revved. {"Tachometer checking type" only}
5. The pre-programmed run time (5 / 10 / 20 / 30 minutes) has elapsed.
6. Press * button twice on the remote transmitter under remote start mode .
7. Move the optional remote start enable toggle switch to OFF position. (If installed)
8. The vehicle refused to start running after {3} unsuccessful attempts.

J. DISABLING THE REMOTE START SYSTEM: (If installed)


This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the OFF position.

LCD REMOTE TRANSCIVER

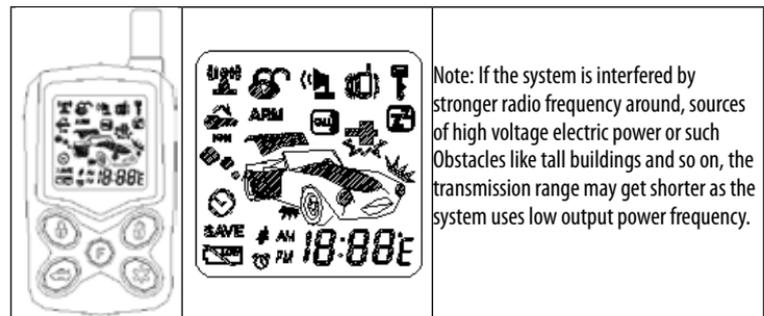

A. BATTERY REPLACEMENT:

A 1.5V type AAA Alkaline battery powers the Remote Transceiver. When the power of the battery weakens a  icon shall be displayed on the LCD screen. When the old battery is replaced to new one, there will be beep sounds indicate the power is up and the clock on the LCD screen returns to **AM12:00** after displaying all the icons. Correct the time by pressing **F** for 3 seconds before using (See Timer Setting).

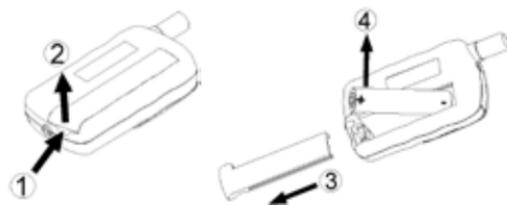

Note: Press the  button two times when the battery compartment is empty, then insert the new battery.

B. THE REMOTE LCD ICONS WITH FUNCTION



Door Lock

Your vehicle doors are locked



Door Unlock

Your vehicle doors are unlocked and the system is Disarmed

ARM

Armed Mode

Your vehicle is in armed mode



Valet Mode

All the function shall be temporarily on hold



Remote Transmission

You are transmitting the signal to control unit



In - Range Indicator

You are within the remote control range.



Door Open Warning

Doors are illegally opened (Zone 3)



Trunk/Hood Trigger

Trunk or Hood is illegally opened (Zone 2)



Shock Sensor Trigger

Trigger on Shock Sensor (Zone 4)



Warn Away Trigger

Trigger on Shock Sensor (Zone 1)



Engine Starting

Your vehicle engine starting by remote control



Timer Control Start

Engine will start automatically at the same time next day or every 2/3-hour.

C3

Activate Channel 3

(Trunk Release).

C5

Activate Channel 5



Time Monitor



Count Down (Parking) Timer

Reminder when time is up for parking



Driver Paging

Someone is paging you in front of your vehicle



Engine Running

Your vehicle's engine is running



Temperature Monitor

Indoor temperature for your vehicle

C4

Activate Channel 4

C6

Activate Channel 6



Alert Alarm

You have set morning call alarm



Vibration Mode

Remote Control vibrates when the system is triggered



Low Battery

You have to replace the battery of remote control.

C. PROGRAMMING OF THE LCD REMOTE TRANSMITTER:

Transmitter Button	Description	Operation
F (1 second)	LCD screen lamp turns on for 5 seconds	Press and hold for 1 second 1 melody sound to confirm enters
F (3 seconds)	Timer Programming Mode	Press and hold for 3 seconds 2-melody sounds to confirm enter
F - F - F	Clear the Flashing Icon and Melody Sound on the LCD Screen Transmitter	Press within 3 seconds
F -  (2-second)	Melody / Vibration () Mode	Press within 3 seconds

F -  (2-second)	Program Count Down (Parking) Timer (10-Minute / 20M / 30 M / 1Hour / 1.5H / 2.0H)	Press within 3 seconds to cycle *leave the buttons starting count down then  flashes
---	---	---

- Screen Lamp ON:** Press and hold the **F** button one second, with one melody sound and the LCD screen lamp will turn on for 5 seconds
- Clear the Flash Icon and Melody Sound:** Press the **F** button 3 times within 3 seconds will clear the flash icon and melody sound on the LCD screen transceiver
- Stop The Trigger Melody Sound:** While triggering the alarm the LCD screen will alert user through melody sound and flashing trigger icon, press any button on the LCD remote transmitter to stop melody sound only.
- Vibration / Melody Mode:** It is useful when you are in a noisy place and difficult to hear beep sound from the remote control as the remote control in this mode, vibrates itself if your security system is triggered. Press the **F** button first, within 3 seconds press and hold the  button for 2 seconds to select the mode of vibration or melody, the  icon will displayed on the LCD screen to show the LCD remote transceiver is on vibration mode.
- Low Battery Indication:** When the power of the battery weakens, it has two short "beep" sound and flash  icon while pressing the button of the LCD screen transceiver.



6. Set Up Fixed Count Down (Parking) Timer:

- Press the **F** button first, within 3 seconds press and hold the  button for 2 seconds, the LCD screen will show  icon and timer (ie. 0:10),
- Press the  button again showing next order time on the screen (ie.0:20), press it again (ie.0:30)and so on.
- Leave the buttons starting count down then  icon flashes

Note:

- The count down period is fixed as 10 minutes, 20 minutes, 30 minutes, 1 hour, 1.5 hours and 2 hours maximum.
- When count down timer showing 0:00 means to turn off the timer.
- Press **F** button for real time indication when the timer is counting down.

7. Out Of Range Indication: If this feature is selected, the security system will automatically check the range every 20 minutes after armed.

- If user is within the range, the  icon will display on the LCD screen.
- If user is out of range, it has five short "beep" sounds and the  icon will disappear on the LCD screen.

D. TIMER SETTING:

	Transceiver Button	Description	Press Transceiver Button
1	Press & Hold the F button for 3 seconds	Timer Setting (Hour) *Flashes digit for adjusting	* for – and  for +
	Press the F button once	Time setting (Minute) *Flashes digit for adjusting	* for – and  for +
2	Press the F button once.	Alert Alarm Time Setting (Hour) *Flash digit for adjusting	* for – and  for +
	Press the F button once	Alert Alarm Time Setting (Minute) *Flashes digit for adjusting	* for – and  for +
	Press the F button once	Alert Alarm Setting ON / OFF	* for OFF and  for ON
3	Press the F button once	Count Down Timer Setting (Hour) *Flashes digit for adjusting (Max.19 hours 59 minutes)	* for – and  for +
	Press the F button once	Count down Timer Setting (Minute) *Flashes digit for adjusting	* for – and  for +
4	Press & hold the  button for 2 seconds	Daily Timer Start Timer Setting Flashes  /  Icon and "Hours" for adjusting	* for – and  for +

EXIT: Press and hold the **F** button for 2 seconds or leave it for 10 seconds, the system will exit the programming mode.

1. Timer Setting: Example to AM10:30

1. Press & hold the **F** button for 3 seconds, with two-melody sound and the "Hours" digit flashes for adjusting.
2. Press the ***** or  button to decrease or increase the "Hour" digit until AM10:xx
3. Press the **F** button once again then the "Minute" digit flashes for adjusting.
4. Press the ***** or  button to decrease or increase the "Minutes" digit until AM 10:30
5. Press the **F** button for 2 seconds with one-melody sound to confirm exit the timer program mode.

2. Alert Alarm Timer Setting: Example to PM 6:30

1. Press & hold the **SET** button for 3 seconds, with two-melody sound and the "Hours" digit flashes for adjusting.
2. Press the **F** button twice, the LCD screen will shows  icon and "Hours" digit is flashes for adjusting.
3. Press the ***** or  button to decrease or increase the "Hour" digit until **PM 6:xx**
4. Press the **F** button once again then the "Minutes" digit flashes for adjusting.
5. Press the ***** or  button to decrease or increase the "Minutes" digit until **PM 6:30**
6. Press the **F** button once again then  icon flashes for alert alarm "ON / OFF" setting
7. Press the  button to start the "Alert Alarm Timer", and the "ON" icon will show on the LCD screen.
8. Press the ***** button to stop the "Alert Alarm Timer", and the "OFF" icon will show on the LCD screen.
9. Press **F** button for 2 seconds with one-melody sound to confirm exit the timer program mode.

3. Count Down Timer (Parking) Setting: Example Set count down timer at 2:30

1. Press & hold the **F** button for 3 seconds, with two-melody sound and the "Hours" digit flashes for adjusting.

2. Press the **F** button 5 times, the LCD screen will shows  icon and "Hours" digit is flashes for adjusting.
3. Press the ***** or  button to decrease or increase the "Hour" digit until **2:xx**
4. Press the **F** button once again then the "Minutes" digit flashes for adjusting.
5. Press the ***** or  button to decrease or increase the "Minute" digit until 2:30
6. Press the **F** button once again then  icon flashes for alert alarm "ON / OFF" setting
7. Press the  button to start the count down timer, and the "ON" icon will show on the LCD screen.
8. Press the ***** button to stop the count down timer, and the "OFF" icon will show on the LCD screen.
9. Press the **F** button for 2 seconds with one-melody sound to confirm exit the timer program mode.

Note: Maximum is 19 hours.

4. Time Set-Up For "Daily Timer Start": Example to AM 6:30

1. Press & hold the **SET** button for 3 seconds, with two-melody sound and the "Hours" digit flashes for adjusting.
2. Press & hold the  button for 2 seconds, the LCD screen will flash  /  icon and "Hours" digit for Hour set-up.
3. Press the ***** or  button to decrease or increase the hour digit until **AM 6:00**
4. Press the **F** button once again then the minute digit flashes.
5. Press the ***** or  button to decrease or increase the minutes digit until **AM 6:30**
6. Press the **F** button for 2 seconds with one-melody sound to confirm exit the timer program mode.

550R 12/2006

6876 V.A

ALERT



www.alertautomotive.com



©2004 JBS Technologies
225 Technology Way • Steubenville, OH 43952